



**Founding Member: "That Darn Casablanca Cult"**

## **OPENING THE BURNER TRAY ON THE S-4000 AND S-4000 PRO WHEN NOTHING ELSE WORKS**

One can sometimes get to a point at which the usual methods of opening the burner tray on the S-4000 and S-4000 Pro will not work. These methods include the physical eject button on the front of the units and the software buttons which may not be accessible.

Here's what to do in those cases (you'll need a keyboard attached for this to work):

***With the unit off, switch it on and keep the ESC key pressed. The tray will open after a short while. You can then release the ESC key.***

Join the Cassie Cult