

## INSTALLING DVD FIRMWARE UPDATE V1.4

You do **NOT** need an unlock code to install this software.

This update provides the latest firmware updates for the following burner models:

<b>DVR-103 (A03)</b>	<b>V2.0</b>
<b>DVR-104 (A04)</b>	<b>V1.41</b>
<b>DVR-105 (A05)</b>	<b>V1.33</b>
<b>DVR-106 (A06)</b>	<b>V1.08</b>
<b>DVR-107(A07)</b>	<b>V1.22 *</b>
<b>DVR-108 (A08)</b>	<b>V1.20</b>
<b>DVR-109 (A09)</b>	<b>V1.50 *</b>
<b>DVR-110 (A10)</b>	<b>V1.37 *</b>

\* new with this update

If you are running **V2 of higher Arabesk** you can determine your burner model and current firmware version from the Settings screen of Arabesk as shown on the right.

If you are running **V1 Arabesk** just run the install procedure below and you will be informed whether an update is necessary for your burner.

**To install the updates:**

**From a SmartMedia card:**

1. Shut your Casablanca down
2. Insert the SmartMedia card containing the DVD firmware updates
3. Turn your Casablanca ON and follow the screen instructions.

**From an "all software CD: (You need to have a DVD burner installed and be running V4 SmartEdit and V2 Arabesk to update your firmware from a CD.)**

1. Go to the Install Product screen
2. Insert the "all software" CD containing the DVD firmware updates.
3. When the Avio HD Upgrade appears in the list select "activate"

That's all there is to it.

**NOTE:** There's no need to save the software since once done, the update is permanent.

